


# Thermal Receipt Printer Quick Install Guide

## 1. What's inside the Box

Printer	Power Adapter
Power Cord,	Printer Cable
Paper roll	CD

## 2. Printer connection


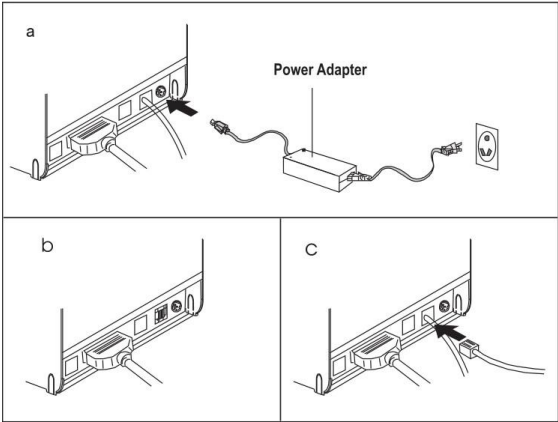


### 3. Driver installation

- i. Place the CD into CD-ROM device or download driver from supplier website
- ii. Browse the CD and open the driver fold to initiate the installation. Or click on “Add Printer” “Have Disk” “Browse”, select correct Model number from driver file location to complete driver installation.
- iii. Select the Operation System, Printer Model Number and interface type.



Note: if you're connecting through Ethernet cable: “Creat port”“new port””Insert new IP address as new printer port”

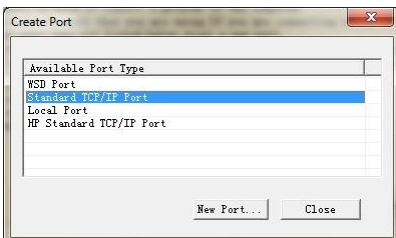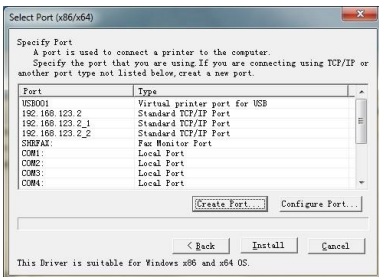

## 4. Taking Selftest

Press and hold FEED button while turning on the printer, Release FEED button while the ERROR LED light (red color) is off, Selftest page will be printed.




## 5. Code Page Setting

Refer to selftest page code page details, if you're using English or Arabic, set as below:

Set Default Code Page:   0   (English)

Set Default Code Page:  22  (Arabic)

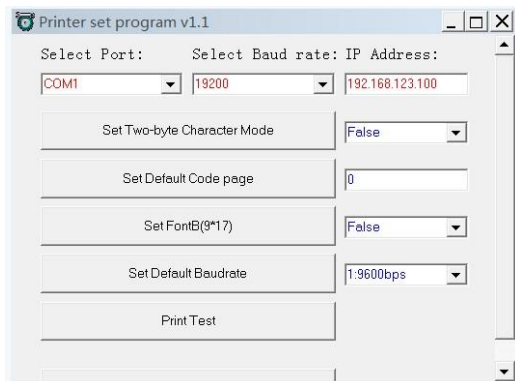


# 6. DIP Switch Configuration

DIP switch is available on the bottom of the printer. The options are also can be found out from Self-test.

To change the printer setting manually:

- i. Turn off the printer
- ii. Remove the DIP switch protective cover
- iii. Adjust the DIP switches to configure the printer

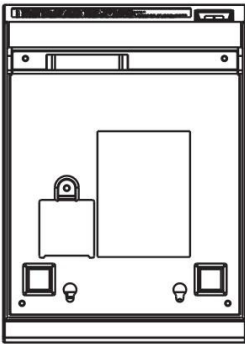

DIP-8	Function	ON	OFF
SW-1	Select cutter	No	Yes
SW-2	Select beeper	Yes	No
SW-3	Select print density	Dark	Light
SW-4	Two-byte character code	No	Yes
SW-5	Character per line	42	48
SW-6	Cutter with cash drawer	Yes	No
SW-7	Select baud rate		
SW-8	Select baud rate		



# 7. Baud Rate Setting

When you connect printer through RS-232 port, remember to change the baud rate to be same as your host PC.

i. Adjust DIP switches according to below


SW-7	SW-8	Baud rate
ON	ON	38400
OFF	ON	115200
ON	OFF	9600
OFF	OFF	19200

ii. Access the properties of your printer (Start → Printers and Faxes → Printer Properties → Port → Configure Port

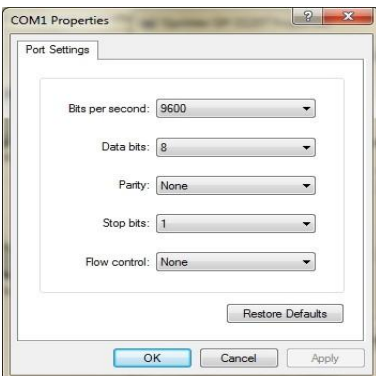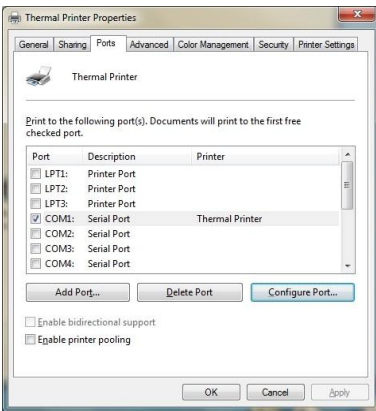


## 8. Ethernet Setting


- i. Find Ethernet setting tool from driver CD or download from website to change the printer IP .
- ii. Connect printer to network with Ethernet cable;
- iii. Click on “Ethernet Printer Config Tool” , “Search printers”

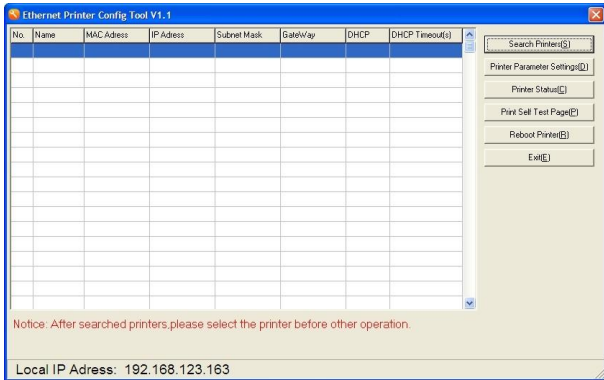

### Default printer IP

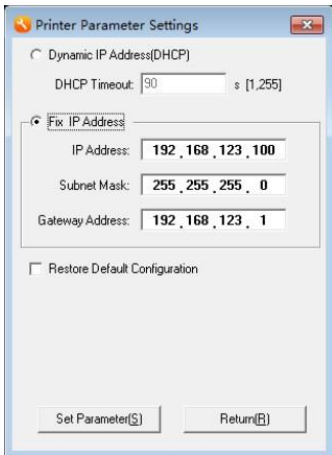

### Change a new one

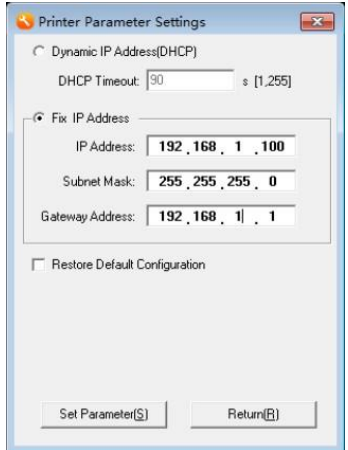

Click “Set Parameter” to continue.



Again “Search Printer” to check printer new IP details.